

 


# Operating & Installation Instructions

## Front Loading Washing Machine

### Model BD-W70MAE

**HITACHI**  
Inspire the Next

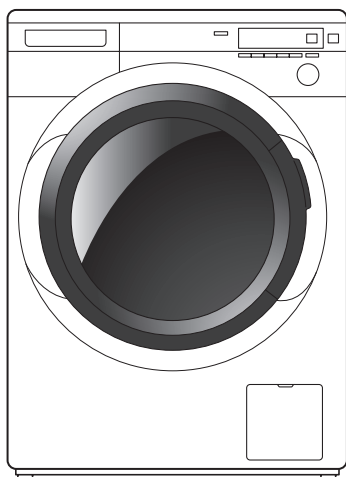

 
## Contents

<b>Environmentally Friendly Waste Disposal</b>	<b>3</b>
<b>Hints and Tips for Eco-Friendly Washing</b>	<b>3</b>
<b>Safety Instructions</b>	<b>4</b>
<b>Product Descriptions</b>	<b>6</b>
<b>Control Panel and Display</b>	<b>7</b>
<b>Before You Start Washing</b>	<b>9</b>
<b>How to Use the Washing Machine</b>	<b>11</b>
<b>Program Overview</b>	<b>14</b>
<b>In Case of Emergency</b>	<b>16</b>
<b>Care and Maintenance</b>	<b>17</b>
<b>Troubleshooting</b>	<b>19</b>
<b>Error Codes</b>	<b>21</b>
<b>How to Install the Washing Machine</b>	<b>22</b>
<b>Customer Service</b>	<b>28</b>
<b>Consumption Values</b>	<b>29</b>
<b>Specifications</b>	<b>29</b>


 

 

**Thank you for purchasing a Hitachi front loading washing machine.**

- Please read these operating & installation instructions carefully for proper operation of the machine.
- Please keep these operating & installation instructions for future reference.


 
# Product Descriptions

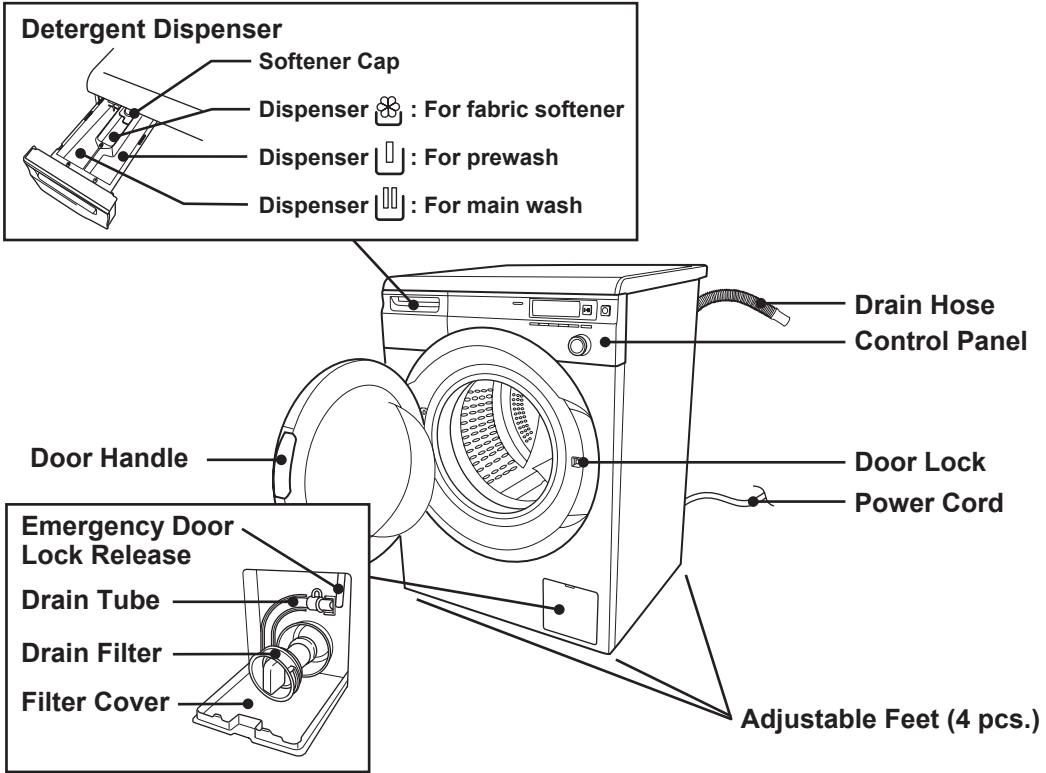

 
## Packed-In Accessories

Either type of water supply hose is packed in by area demand.		<b>Hose Guide</b>	<b>Spanner</b>	<b>Cover Caps</b>
<b>Water Supply Hose &amp; One-touch Joint</b>	<b>Water Supply Hose (Screw Type)</b>			
		(1 piece)	(1 piece)	(4 pieces)

## Optional Accessories

<b>Upper Plate</b>	<b>Water Leak Detection Hose</b>
	
See page 27 Part No. BD-W80MV 150	Part No. BD-W80MV 162
Please contact your local dealer when installing the upper plate and the water leak detection hose.	

# How to Use the Washing Machine

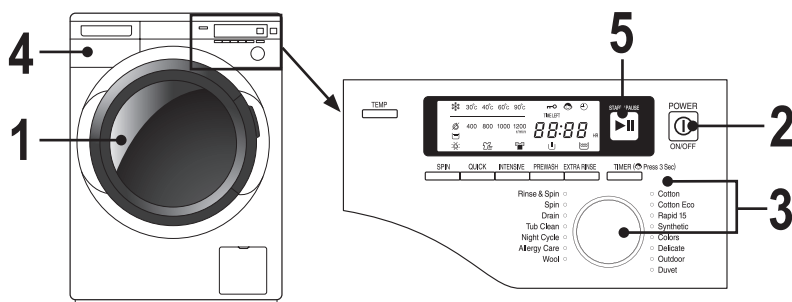

## 1 Sort and load the laundry

- Sort the laundry according to type of fabric, care label symbol, color and degree of soiling.  
→ Page 9 : Preparation of the washing.
- Do not exceed the maximum load.
- Close the door. Take care not to trap any items of clothing between the door and rubber seal.

## 2 Press the POWER button to switch power on

- If no program is selected or no button is pressed for 10 minutes, the washing machine automatically switches itself off. Press the POWER button again to turn power on.

## 3 Select and adjust the program

- Select a washing program first with the Jog Dial.
- Use the option buttons to set additional functions.  
→ Page 7 : Control Panel and Display.  
→ Page 14 : Program Overview.
- If you select the wrong program by mistake, reselect the washing program by turning the Jog Dial.

## 4 Add detergent into the detergent dispenser

- The detergent and any additives must be placed in the appropriate dispenser.  
→ Page 6 : Product Descriptions (Detergent Dispenser).
- Add the appropriate amount of detergent suggested in the manufacturers' instructions.  
→ Page 10 : Detergent and additives.

## 5 Press the START/PAUSE button

- The washing machine starts to detect laundry size, fabric type and water temperature before setting the wash time.
- The wash time displayed on the remaining time indicator varies according to the conditions.  
→ Page 8 : Control Panel and Display.
- Once a program starts, settings cannot be changed.