





Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

Compartments

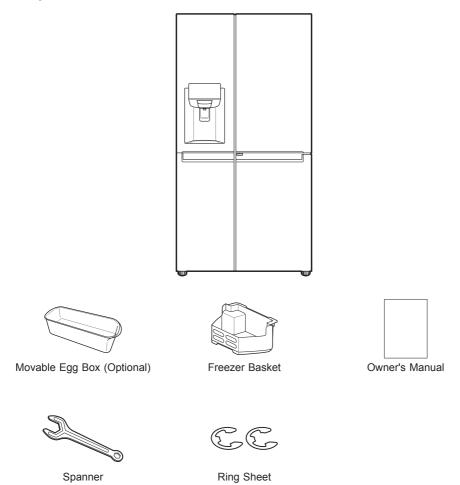

• The appearance or components of the appliance may differ from model to model.

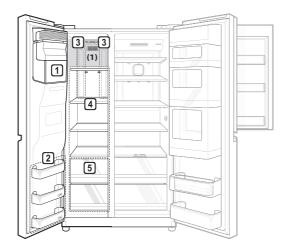

1 Automatic Icemaker

This is where ice is automatically produced and stored.

• When not being used to make ice, the icemaker can be used as a freezer door basket.

2 Freezer Door Basket

This is where small packages of frozen food can be stored.

 Do not store ice cream or food which will be stored for a long period of time within these baskets.

3 LED Lamp

The LED lamps inside the appliance light up when you open the door.

4 Freezer Shelf (Optional)

This is where frozen foods such as meat, fish, and ice cream can be stored.

5 Freezer Drawer (Optional)


This is for long-term storage of frozen items.

NOTE

- The 2-star section (★★) basket or drawer can be used to store ice and food from -12 °C to -18 °C for short periods.
- The top shelf of the freezer(1) will reach the set temperature the most quickly.

Using Control Panel

Units and Functions

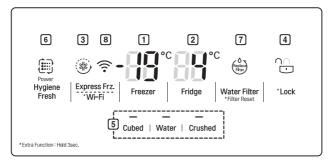

1 Freezer Temperature

• This sets the freezer target temperature.

2 Fridge Temperature

• This sets the fridge target temperature.

3 Express Freeze

• This sets Express Freeze functions.

4 * Lock

 This locks the buttons on the control panel.

[5] Water Dispenser

 This sets the function of Cubed ice, Water, Crushed ice.

6 Hygiene Fresh

• This sets the Hygiene Fresh function.

7 * Replacement Filter (Optional)

 This shows the replacement period of the water filter automatically (plumbed models only).

8 * Wi-Fi

 This sets the appliance to connect to your home's Wi-Fi network.

• The actual control panel may differ from model to model.