

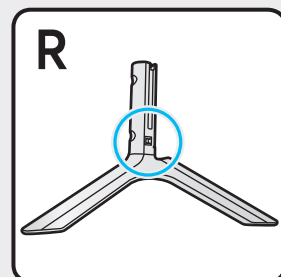
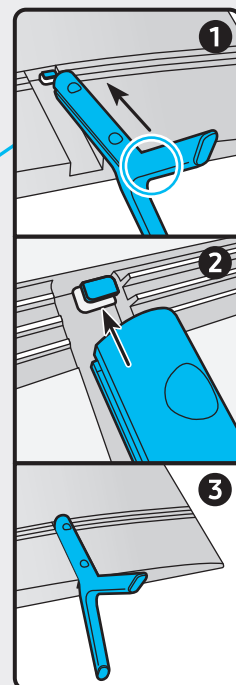
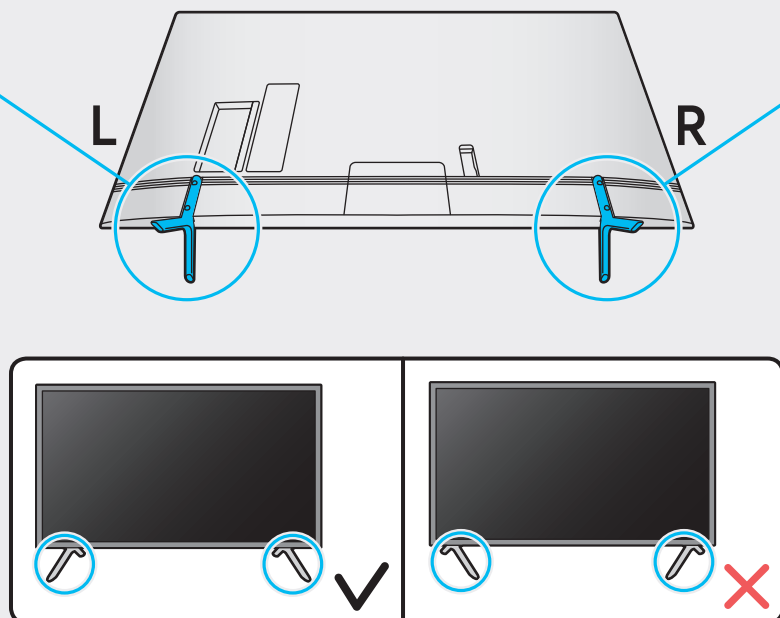
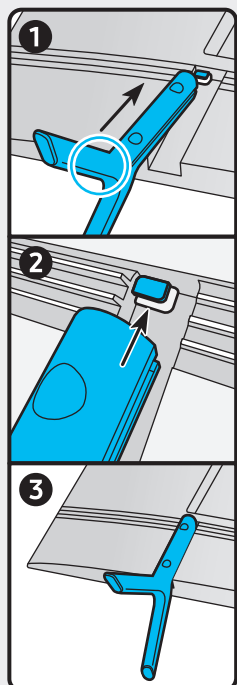


4

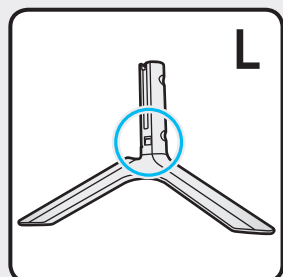


5


x 2
(M4 x L14)

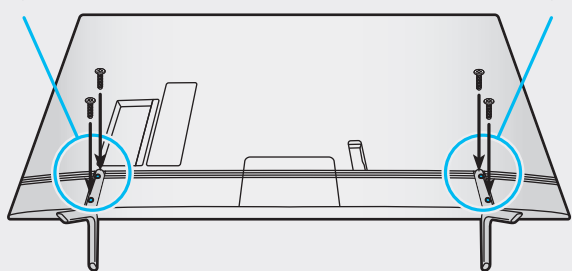

x 2
(M4 x L14)




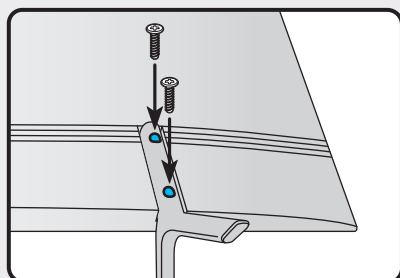


6





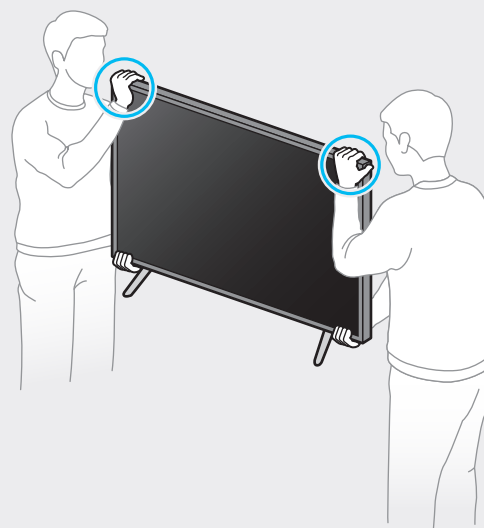


7

43"

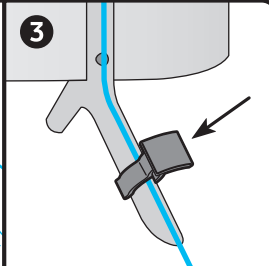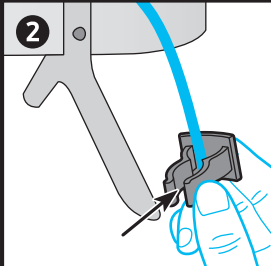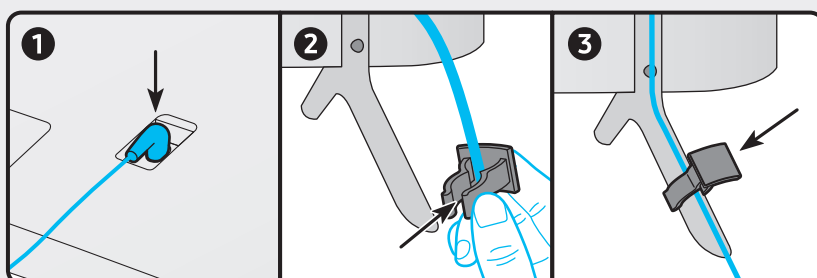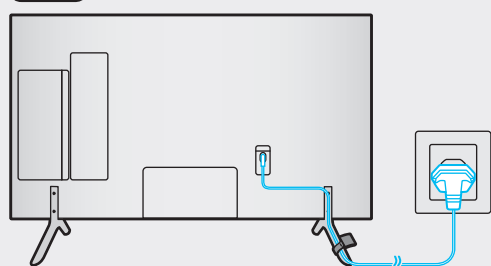

49"-75"

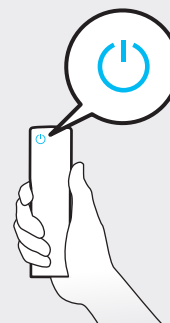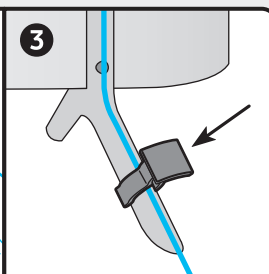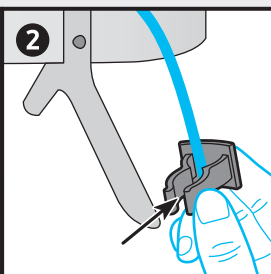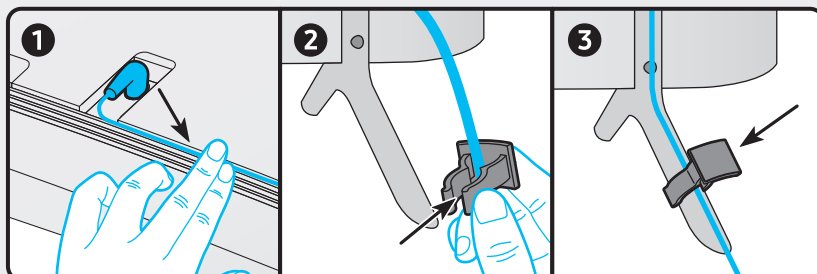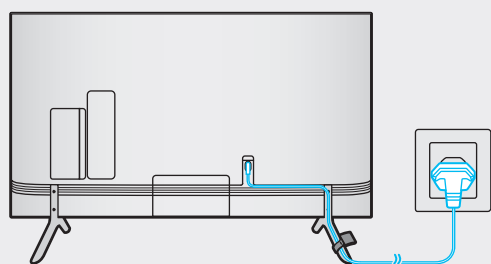


SAMSUNG

Краткое руководство по установке
QUICK SETUP GUIDE

Жылдам орнату нұсқаулығы

Короткий посібник зі встановлення
O'rnatish bo'yicha qisqacha qo'llanma


RU7100U / RU7120U / RU7140U / RU7170U

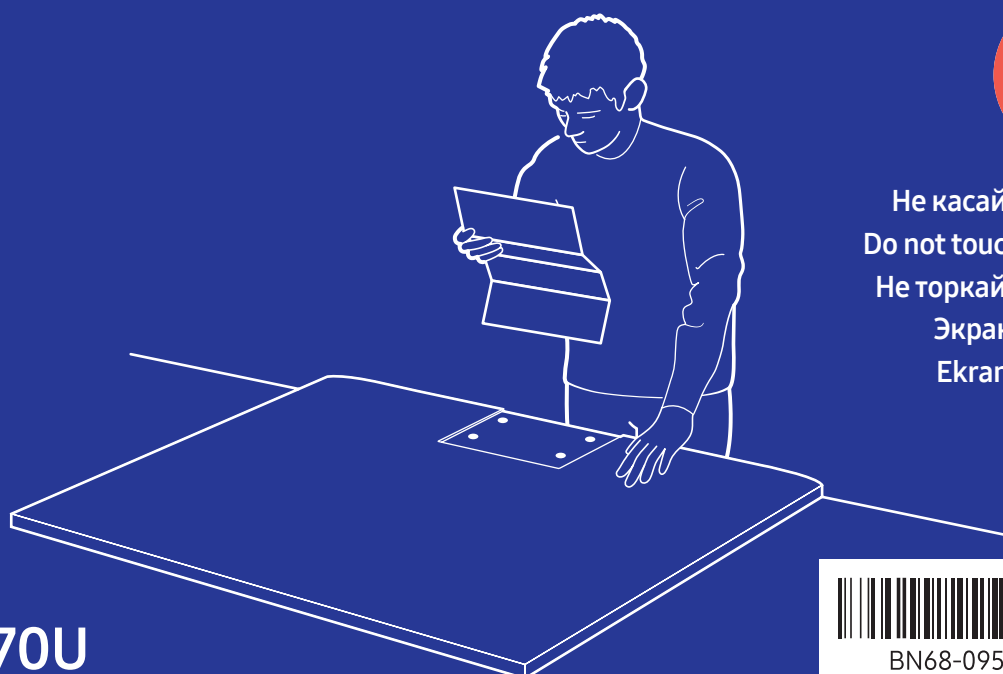




Не касайтесь экрана
Do not touch the screen
Не торкайтесь екрану
Экранды тиеңіз
Ekranğa tegmang






BN68-09510A-00

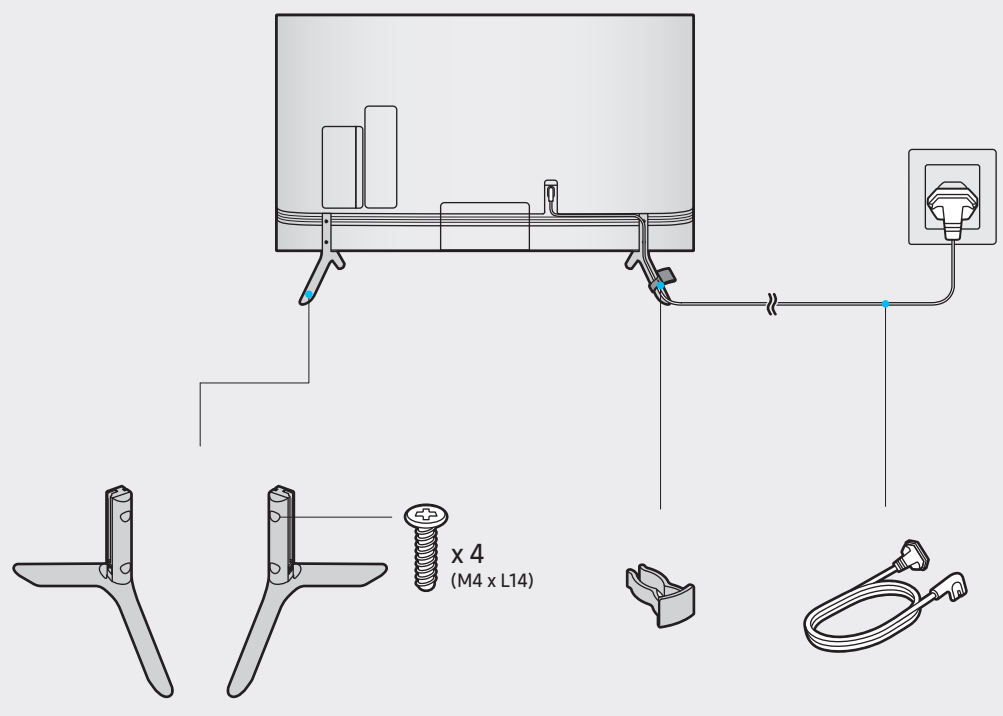

43"
-
50"

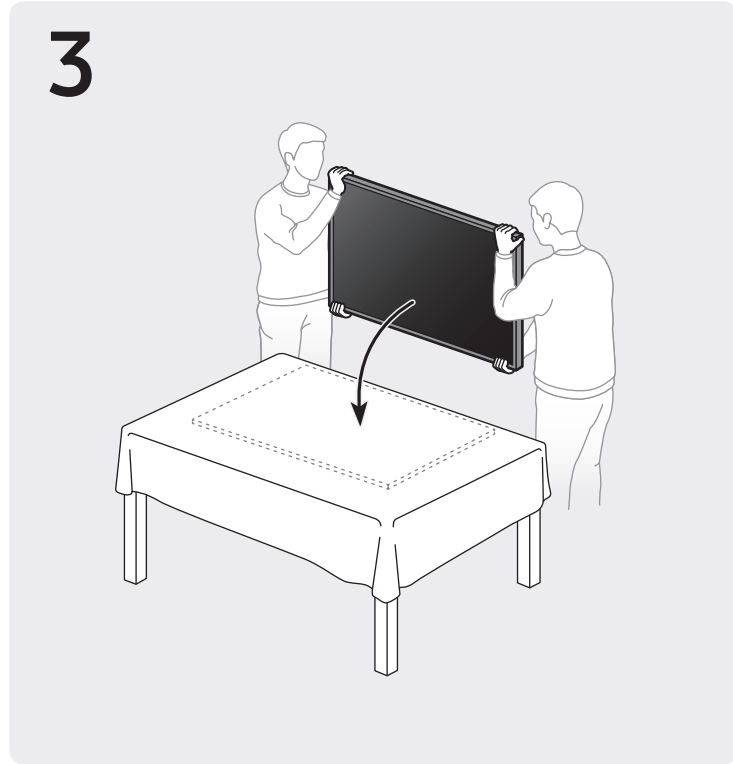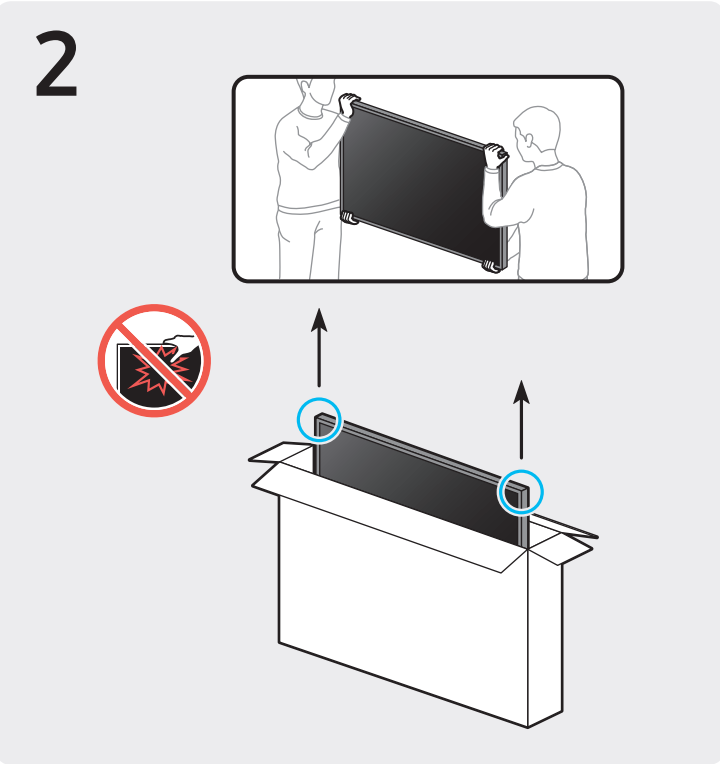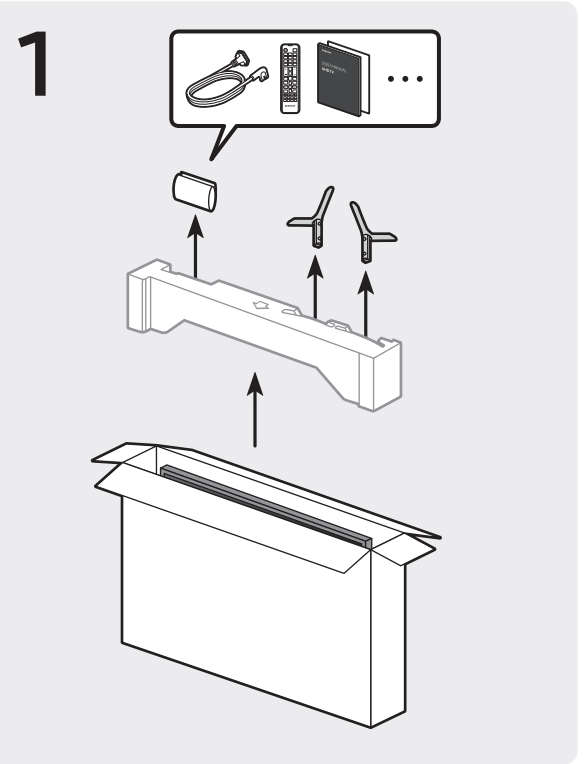

55"

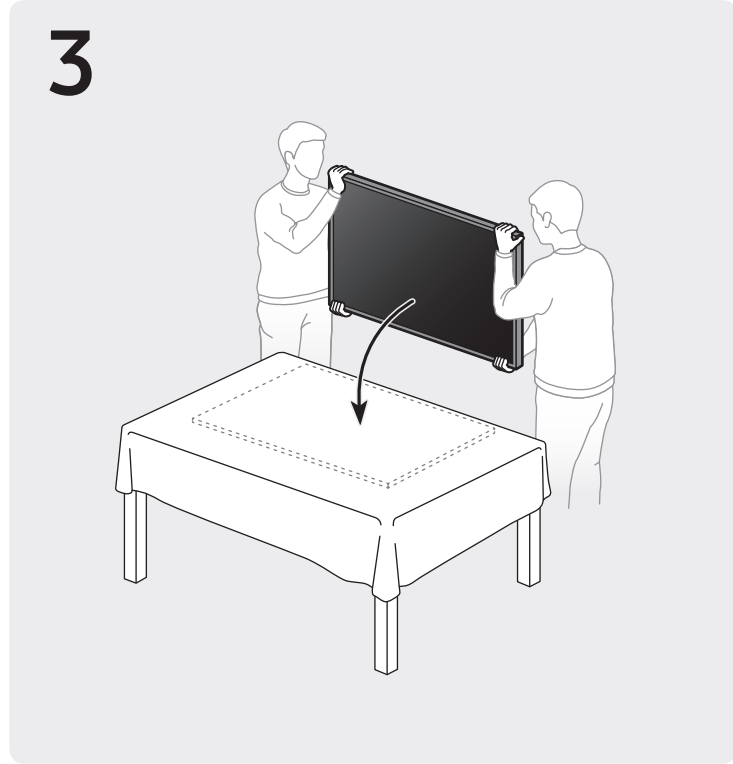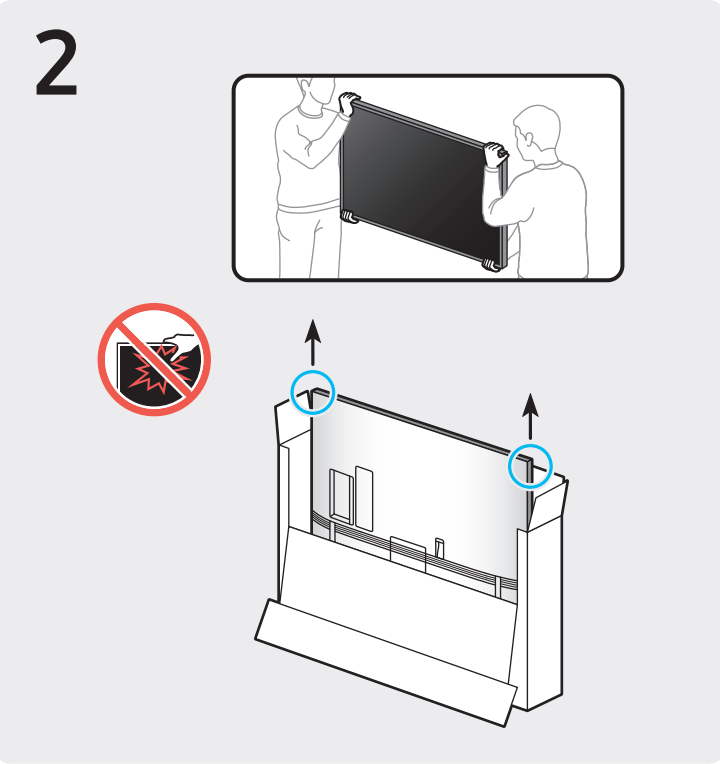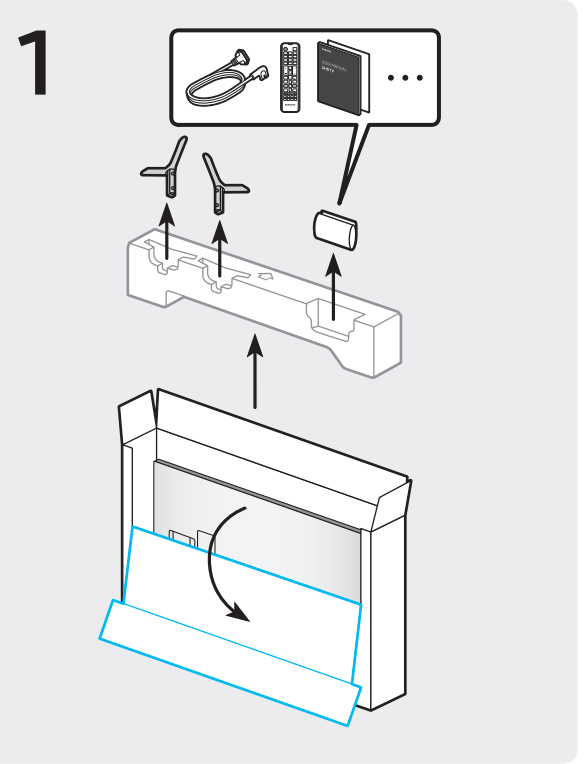

58"
-
75"

